


### Cyclops Pigtail Cable with Locking Sleeve

- ◆ 2 foot Pigtail Cable with Locking Sleeve (P/N 2100-750) shown
- ◆ 5 Meter Pigtail Cable with Locking Sleeve (P/N 2100-755)
- ◆ 10 Meter Pigtail Cable with Locking Sleeve (P/N 2100-751)
- ◆ 25 Meter Pigtail Cable with Locking Sleeve (P/N 2100-752)
- ◆ 50 Meter Pigtail Cable with Locking Sleeve (P/N 2100-753)




Any of the cables listed above may be used to operate the Cyclops.

Cyclops pins / wires

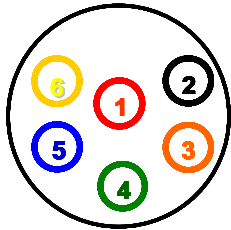

Cyclops Pigtail cable holes

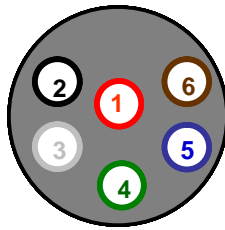

Color	Pin	Function	Connection
Red	1	Supply Voltage 3-15 VDC	PSU – Positive Connection
Black	2	Supply Ground 0 VDC	PSU – Ground Connection
White	3	Signal Out to data logger, "+", 0-5 VDC	Positive Connection
Green	4	Analog Ground, "-", 0 VDC	Negative Connection – Analog Ground
Blue	5	x10 Gain, Medium Sensitivity	Analog Ground - Blue tied to Green
Brown	6	x100 Gain, High Sensitivity	Analog Ground - Brown tied to Green

